


BP822 Exploded View 20150330

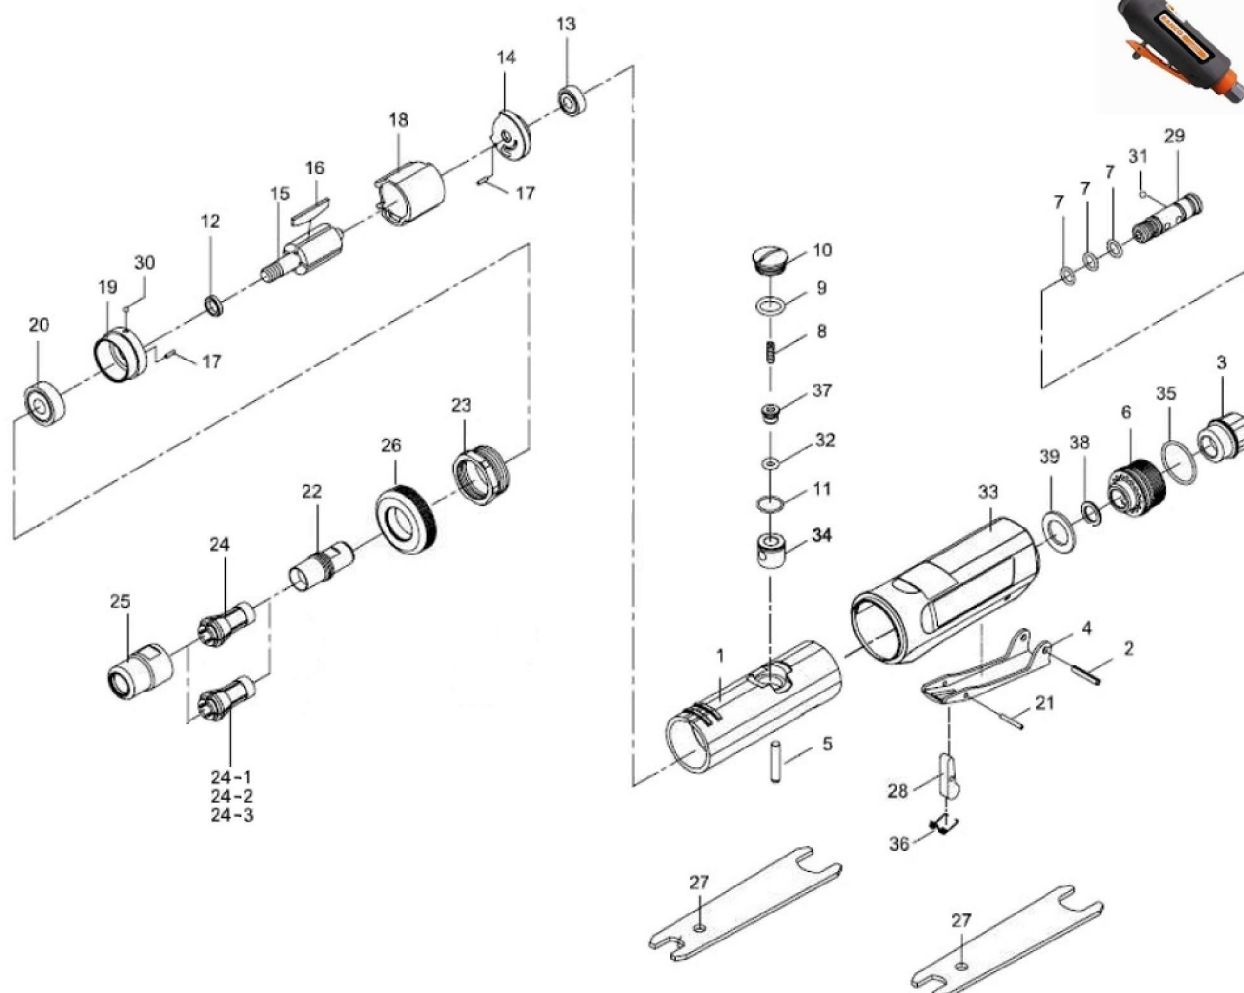

NO	TOOL	PART	PART DESCRIPTION
1	BP822	P82201	REP N 1 MOTOR HOUSING
2	BP822	P82002	REP N 2 SPRING PIN (3X18L)
3	BP822	P82203	REP N 3 AIR INLET
4	BP822	BP11504	REP N 4 LEVER
7	BP822	P82044	REP N 7 O-RING (7.5X1.5)
8	BP822	P82205	REP N 8 SPRING
9	BP822	P82206	REP N 9 O-RING (9.8X1.9)
10	BP822	P82207	REP N 10 VALVE SCREW
11	BP822	P82208	REP N 11 O-RING (10.5X1)
12	BP822	P82209	REP N 12 ROTOR SPACER
13	BP822	P82011	REP N 13 BALL BEARING (696ZZ)
14	BP822	P82014	REP N 14 REAR END PLATE
15	BP822	P82210	REP N 15 ROTOR
16	BP822	P82211	REP N 16 ROTOR BLADE (1 UNIT)
17	BP822	P82042	REP N 17 SPRING PIN (1.5X6L)
18	BP822	P82212	REP N 18 CYLINDER
19	BP822	P82213	REP N 19 FRONT END PLATE
20	BP822	P82114	REP N 20 BALL BEARING (608ZZ)
21	BP822	P82215	REP N 21 SPRING PIN
22	BP822	P82216	REP N 22 SPINDLE

NO	TOOL	PART	PART DESCRIPTION
23	BP822	P82217	REP N 23 FRONT COUPLING
24	BP822	P82218	REP N 24 COLLET (6MM)
24-1	BP822	BP822AC3	REP N 24-1 COLLET 3MM FOR DIE GRINDER
24-2	BP822	BP822AC8	REP N 24-2 COLLET 8MM FOR DIE GRINDER
24-3	BP822	BP822AC14	REP N 24-3 COLLET 1/4"FOR DIE GRINDER
25	BP822	P82219	REP N 25 COLLET NUT
26	BP822	P82220	REP N 26 FRONT CAP
27	BP822	P82221	REP N 27 SPANNER (11MM, 17MM)
28	BP822	P82222	REP N 28 LEVER BAR
29	BP822	P82223	REP N 29 FIXED SHAFT
30	BP822	P82012	REP N 30 STEEL BALL (3/32")
31	BP822	P82039	REP N 31 STEEL BALL (1/8")
32	BP822	P82048	REP N 32 O-RING (3.8X1.9)
33	BP822	P82224	REP N 33 GRIP
34	BP822	P82225	REP N 34 BUSHING
35	BP822	P82226	REP N 35 O-RING
36	BP822	P82227	REP N 36 SPRING
37	BP822	P82228	REP N 37 THROTTLE VALVE
38	BP822	P82045	REP N 38 WASHER
39	BP822	P82229	REP N 39 DAMPING MATERIAL